


[BMW F25 X3 28iX SAV / Repair Manuals and Technical Data / 22 Engine and transmission mounting / 22 11 Engine mounting /](#)

22 11 100 Replacing right engine support arm (N52)



Necessary preliminary work:

- Secure engine in [installation position](#)
- Remove rear underguard
- Remove [reinforcement plate](#)

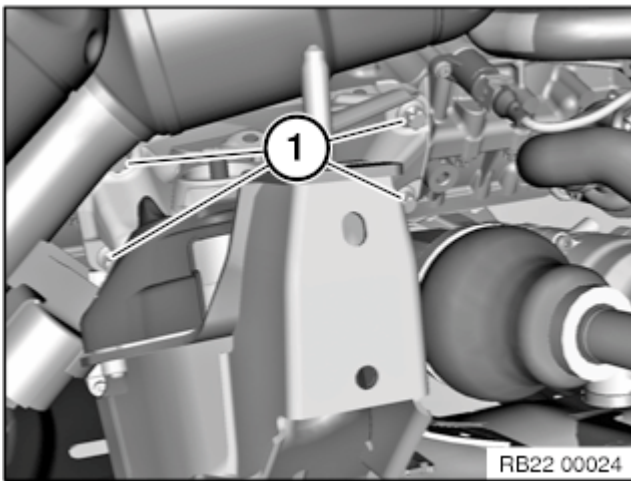

Release screws (1).

Remove engine support arm.

Tightening torque [22 11 3AZ](#).

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.