

54 13 052 Replacing seal on front glass slide/tilt sunroof panel


Overview of Activities

Main Work	
1	Removing L...
2	Installing th...
Postprocesses	
3	Initialise gla...

General information


MAIN WORK

1-Removing the seal at the front panorama glass roof lid

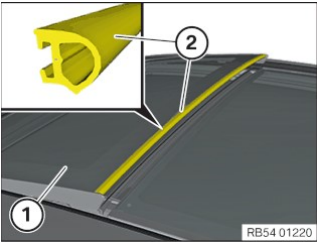

- Open the panorama glass roof lid (1).
- Feed seal (2) out of the panorama glass roof lid (1).

2-Installing the seal at the front panorama glass roof lid

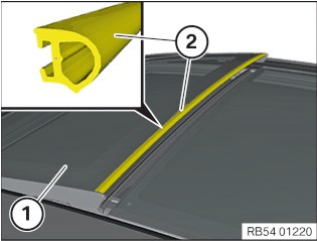


- Open the panorama glass roof lid (1).
- Attach the seal (2) in the panorama glass roof lid (1).

POSTPROCESSES

3-Initialise glass slide/tilt sunroof



- Press and hold the switch in the "Vent Position" direction.
The glass slide/tilt sunroof moves to vent position.
- In the event of a delayed start or sudden stop of the glass slide/tilt sunroof, continue operating the switch in the "Vent Position" direction.

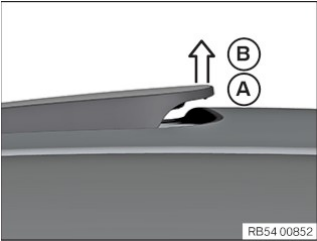

- Continue to operate the switch during the entire ABL.
- After having reached the vent position (A) continue to operate the switch for approximately 30 s (initialisation starts).
 - The glass slide/tilt sunroof moves from vent position (A) toward position (B).
 - Screen (sliding headliner) fully closes.
 - Screen (sliding headliner) fully opens.
 - Glass slide/tilt sunroof moves to "closed" position.
 - The glass slide/tilt sunroof moves to the "Open" position and immediately returns to the "Closed" position.
 - After a brief pause, the screen fully closes.

The initialisation is completed once the glass slide/tilt sunroof and the screen have completely closed.

- Release the switch.

i TECHNICAL INFORMATION

If the switch is released in the meantime, the initialisation must be repeated. Following successful initialisation, the corresponding messages in the Check Cor display go out.

- Carry out function check (one-touch function, anti-trapping protection and, if necessary, comfort function).