

# X3 Cradle Removal

---

Hi, I get it done!

Motivated by Snowbirds M footrest action (R. Howdy!) I yesterday rangemacht and expanded the mobile storage.

The instructions from the E61 did not help here. So here are my detailed instructions here.

Anticipate a few words. Was not hard at all. With the right tools, the each of the gifted is a little (not always trust others probably something in self-defense). And best of all, nothing is broken and everything reversibel completely. So what more could you want? Now it says: freedom for the gummi bears, because sooo much space!

What you need:

- 30 min time

(Of course with the experience now. Defakto it took me longer to get together has searched everything and also I have the opportunity to still be attached to a wall outlet and connect the rear.)

- 10 Torx

- Torx 20ger

- Small screwdriver and check card (to overturn)

- Small towel to cover in the center console area of the circuit so nothing scratched

Here we go:



First Fold up the center console and the small aperture pry up / back (Fig. 1)

Second The 3 20ger Torx screws (Fig. 1)


Third take out the loosely inserted rubber floor and the 4 20ger Torx screws removed (Fig. 1)



4th Pull the entire insert (easily snapped) and remove the 10 torx the right screw in the axis of rotation of the mobile storage. Remove the plastic disk (Fig. 2)




5th the same on the left side (Fig. 3 - here I have the right disk in hand)

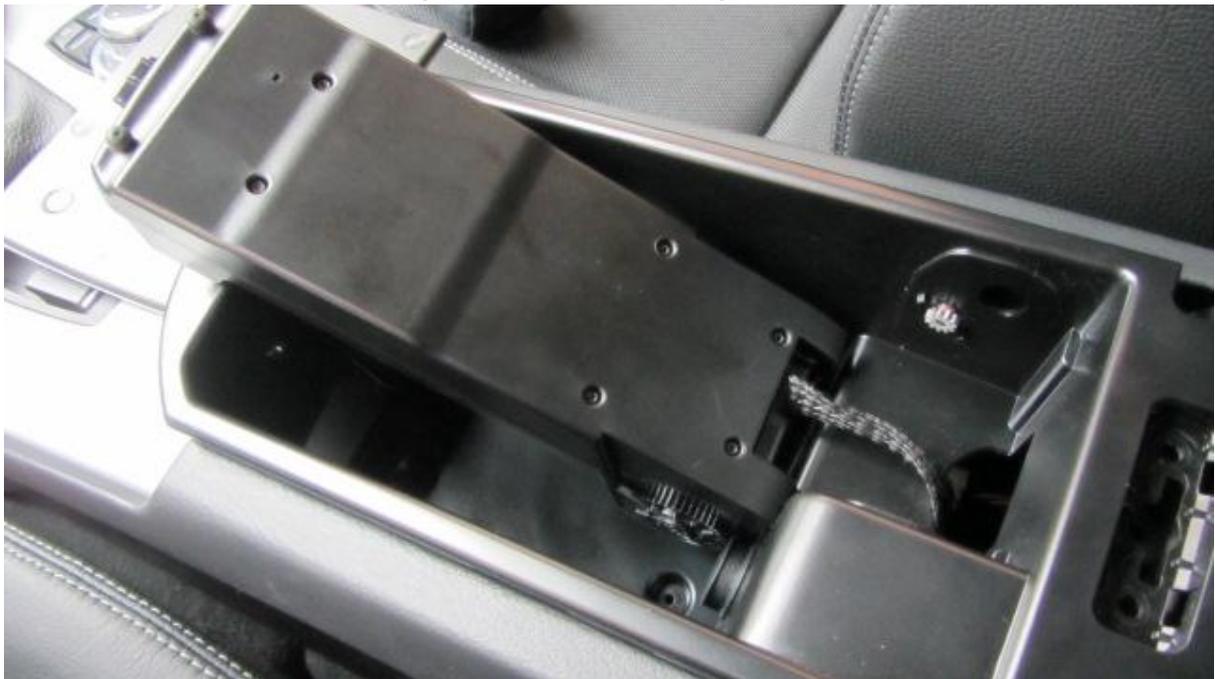

6th Pry out complete mobile rack and remove the 6 Torx 10 (Fig. 4)



7th Handy storage disassemble (Fig. 5)

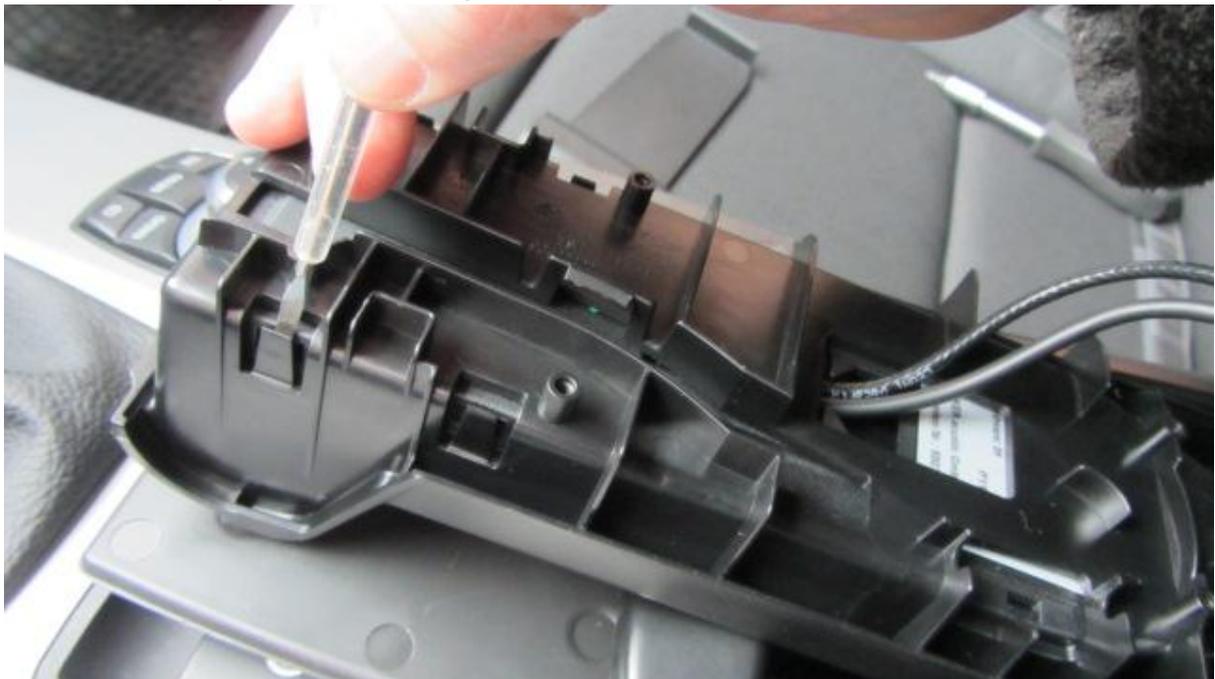

8th To get at the connector you must now remove it from the top of the flat platinum case. These tabs (figure 6)



9th The connector type can not withdraw (Fig. 7). Therefore, they also open the flat platinum case (back straps). This "Caution", there are a few springs inside. Which should not be lost. If they fall out, no problem - you use them easily. (Fig. 8)





10th Because the plug can not deduct from the board, simply pry the board and rausfädeln everything together. Before pocketing all that you should insulate the board. In addition I have them packed in a small freezer bag cut. (Fig. 9)



11th Now "submerged", cable and push the application again (click!) and screw. (Figure 10)



12th To engage the Öffungen I have deposited black duct tape with cardboard and glue. For me, a clean solution. However, this is also more beautiful. (Fig. 11)



13th all that's left, I packed nicely if I want to install some point again (Figure 12)

You're done!

So you dare. Since nothing can go wrong.

Have fun. (I still do every time I look in the center console!)

LG Andraxxx

Source: <http://www.motor-talk.de/forum/ausbauen-der-handyschale-in-der-mittelarmlehne-vorne-t3775402.html>