


[BMW F25 X3 28iX SAV](#) / [Non-electrical diagnosis](#) / [03 Body](#) / [01 Noise](#) / [Noise of doors](#) / [Repair instructions F25](#) /

51 32 420 Removing and installing/replacing trim cover on front door window frame, left or right




Necessary preliminary tasks:


- Open side window
- Release [cover on door window frame](#) in trim cover area

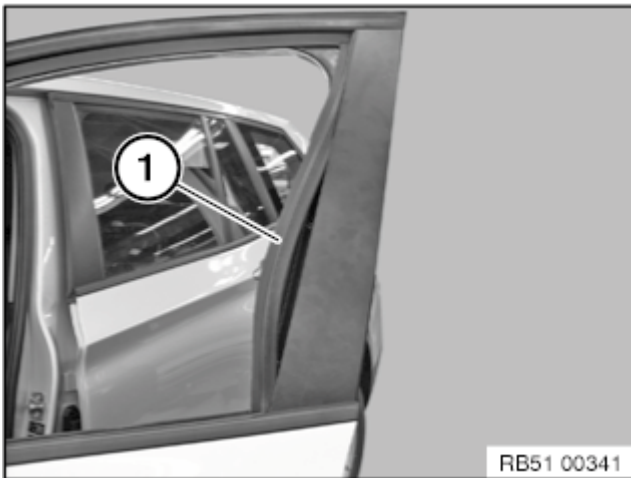

Pull rubber window seal (1) out of rear window guide. *Installation note:* Moisten rubber window seal (1) slightly with water to facilitate installation.

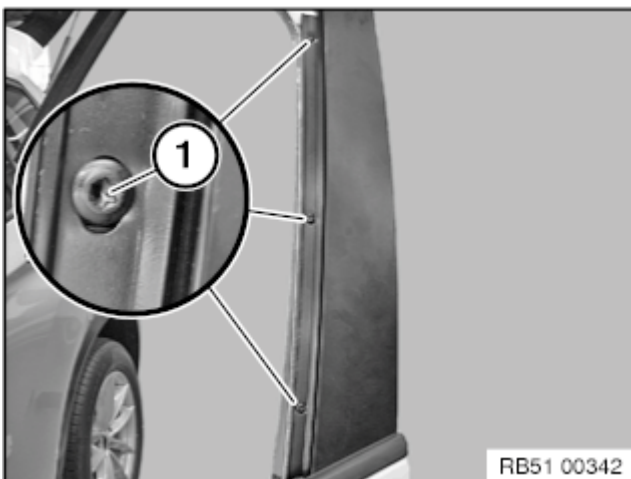

Release screws (1).

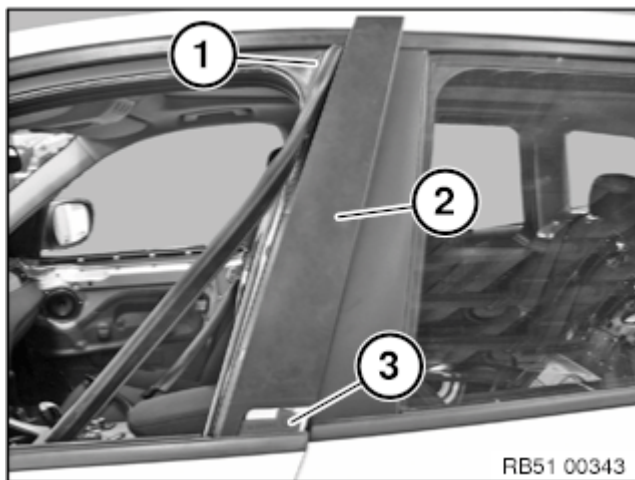


Push trim cover on window frame (2) down slightly until it can be fed out at the top at the rubber window seal (1).

Now carefully pull out trim cover at window frame (2) upwards and toward the rear.

Installation note:

Sealing on end plate of B-pillar (3) must not be damaged or missing.

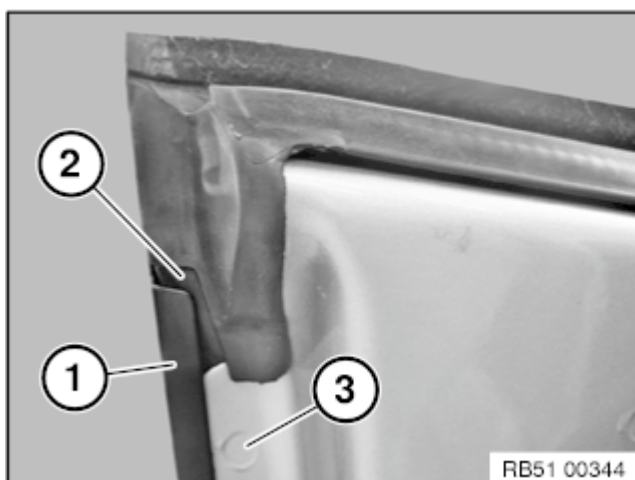

Installation note:

Correctly slide trim cover on window frame (1) over sheet metal edge (3) and rubber window seal (2).

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.